


: Torque, N·m (lbf·ft) : Replace : Warning/Caution : Inspection/Adjustment : Learning : SPL Tool : Required Removal

A. -

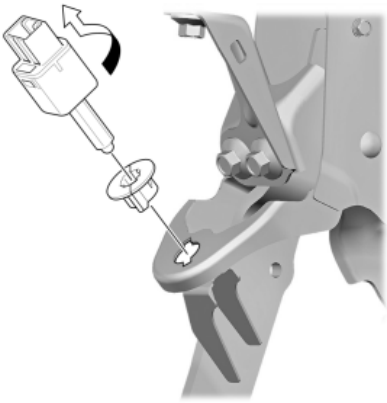

■ Sub-Procedure

• Removal

- Refer to the figure.

■ After Installation

- [Brake Pedal and Brake Pedal Position Switch Adjustment](#)

B. -

NOTICE

Do not remove the brake pedal stroke sensor from the brake pedal.

■ Sub-Procedure

• Installation

Lubricant Specifications (Figure 1)

Position	Type
a	Multipurpose Grease

- Refer to the figure 1.

Tightening Procedure (Figure 1)

Step	Operation	Object	Specification
1	Loosely install	①, ②	Until the bolt is seated ①→②
2	Tightening	All bolts	①→③→②

Figure 1


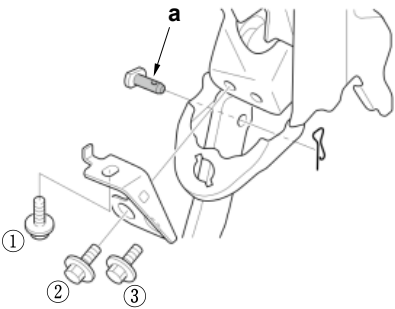


Figure 2

- Install the lock pin as shown. (Figure 2)

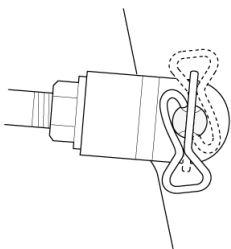

■ After Installation

1. [Brake Pedal and Brake Pedal Position Switch Adjustment](#)
2. [Sensor 0 \(Zero\) Position Memorization](#)

C. -

■ Sub-Procedure

• Removal

NOTE: The APP sensor is not available separately. Do not disassemble the accelerator pedal module.

D. -


■ Key Information

Do the following before starting your work.

Remove:

- [Driver's Seat Assembly](#)
- [Front Passenger's Seat Assembly](#)
- [Center Console Area](#)
 - Center Console Rear Bracket
- [Interior Trim Area](#)
 - Kick Panel (both side)
 - Center Pillar Lower Trim (both side)
- [Rear Seat Cushion](#)

■ Sub-Procedure

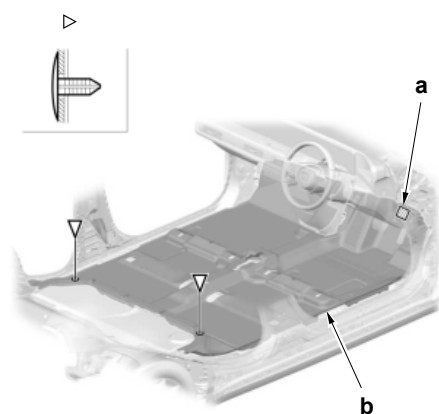**• Removal**

1. Remove the fastener (a), then remove the carpet (b).